


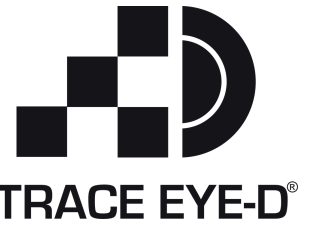

Cocaine Hydrochloride & Cocaine Free-Base (powder & crack) Drug Detection Training

C34 Wipes
(ONE-PART POUCH)

C34 // OVERVIEW



WHAT CAN C34 WIPES DETECT

- cocaine, cocaine HCL, crack, freebase

WHAT FORMS CAN C34 WIPES TEST

- powders, pills, liquids, residues, trace, and bulk


COLOR-CHANGING TECHNOLOGY

- When C34 comes in contact with cocaine free-base (crack), or others, it turns sky blue/light blue to indicate cocaine, or its analogues, is present
- Positive result color will match the box color



Note: The Trace-Eye-D kit is intended to be used for **presumptive identification purposes only**, and all substances tested should be subjected to more definitive examination by scientists in a properly equipped crime laboratory.

C34 // HOW TO USE

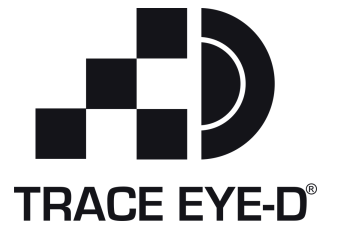


Open. Wipe. Look.

Reduce cross-contamination and exposure to C34, test surfaces and samples by wearing industry-standard personal protective equipment (PPE) such as nitrile gloves, eye protection, and N95 mask equivalent.

- 1** **OPEN** pouch and remove wipe. Do not unfold towelette before or after use - doing so may result in difficulty observing the results
- 2** **WIPE** it across the surface to be tested. For best results, sample small amounts of the substance on the outer edge of the wipe.
- 3** **LOOK** to see if the the wipe has changed color.
Most results are instant, however, some may take up to 30 seconds for a color reaction to develop.
 - negative result // NO color change
 - positive result // sky blue/light blue

C34 // RESULTS

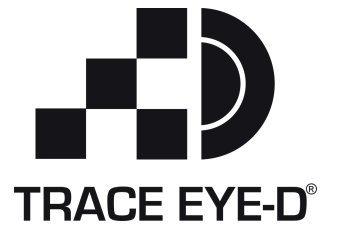

Open. Wipe. Look.


NEGATIVE Result
no color change



POSITIVE Result
test turns sky blue/light blue



C34 // POST TEST

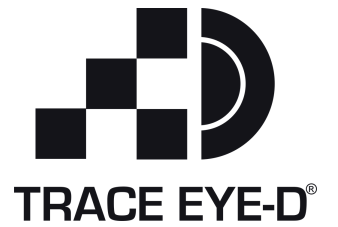

Open. Wipe. Look.

All TRACE EYE-D products are safe for disposal in the common waste stream without neutralization or other special treatment, provided the wipe is not contaminated with drug residue

- 1** **PHOTOGRAPH + STORE** the wipe with a date/time stamp, if required for evidence retention, as the color of the wipe may change over time.
- 2** **DISPOSE** of wipe in accordance with federal state and local environmental laws. No neutralization is required. Can be disposed of in the common waste stream.
- 3** **WASH HANDS + CHANGE** your gloves before conducting additional tests after a positive result is found.

Interested in additional training for your team?



[BOOK A LIVE TRAINING SESSION NOW](#)