



# Fentanyl, Opioids (natural & synthetic) Drug Detection Training

**F1 Wipes**  
(ONE-PART POUCH)

# F1 // OVERVIEW



## WHAT CAN F1 WIPES DETECT

synthetic or natural opioids, and its analogues

- fentanyl, xylazine, carfentanil, oxycodone, heroin, benzyl fentanyl, fentanyl solution, hydrocodone, meperidine, tramadol, morphine, metonitazene

## WHAT FORMS CAN F1 WIPES TEST

- powders, pills, liquids, residues, trace, and bulk


## COLOR-CHANGING TECHNOLOGY

- When F1 comes in contact with fentanyl, synthetic or natural opioids, e.g. oxycodone, morphine, heroin, or others, it turns pink/magenta to indicate fentanyl, or its analogues, is present
- Positive result color will match the box color



Note: The Trace-Eye-D kit is intended to be used for **presumptive identification purposes only**, and all substances tested should be subjected to more definitive examination by scientists in a properly equipped crime laboratory.

# F1 // HOW TO USE

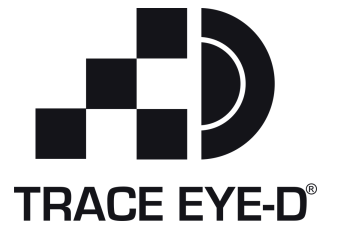

## *Open. Wipe. Look.*

***Reduce cross-contamination and exposure to F1, test surfaces and samples by wearing industry-standard personal protective equipment (PPE) such as nitrile gloves, eye protection, and N95 mask equivalent.***

**1**

**OPEN** the pouch and remove the wipe. *Do not unfold towelette before or after use.* Doing so will result in difficulty observing the results.

**2**

**WIPE** it across the surface to be tested. For best results, sample very small amounts of the substance on the margin of the wipe.

**3**

**LOOK** to see if the formula on the wipe changes color. Most results are instant, however, some may take up to 30 seconds for a color reaction to develop.

- negative result // NO color change
- positive result // pink/magenta



# F1 // RESULTS



*Open. Wipe. Look.*


**NEGATIVE Result**  
*no color change*



**POSITIVE Result**  
*test turns pink/magenta*



# F1 // POST TEST

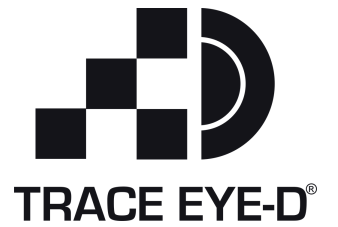

*Open. Wipe. Look.*

***All TRACE EYE-D products are safe for disposal in the common waste stream without neutralization or other special treatment, provided the wipe is not contaminated with drug residue***

- 1** **PHOTOGRAPH + STORE** the wipe with a date/time stamp, if required for evidence retention, as the color of the wipe may change over time.
- 2** **DISPOSE** of wipe in accordance with federal state and local environmental laws. No neutralization is required. Can be disposed of in the common waste stream.
- 3** **WASH HANDS + CHANGE** your gloves before conducting additional tests after a positive result is found.

Interested in additional training for your team?



**BOOK A LIVE TRAINING SESSION NOW**