

# Methamphetamine / MDMA / GHB Drug Detection Training

**M39 Wipes**  
(TWO-PART POUCH)

# M39 // OVERVIEW



## WHAT CAN M39 WIPES DETECT

- methamphetamines, MDMA/ecstasy, bath salts, and PCP

## WHAT FORMS CAN M39 WIPES TEST

- powders, pills, liquids, residues, trace, and bulk


## COLOR-CHANGING TECHNOLOGY

- When M39 comes in contact with methamphetamine, MDMA, bath salts or others, it turns blue/purplish-blue, to indicate meth, or its analogues, is present
- Positive result color will match the packaging color

Note: The Trace-Eye-D kit is intended to be used for **presumptive identification purposes only**, and all substances tested should be subjected to more definitive examination by scientists in a properly equipped crime laboratory.



# M39 // HOW TO USE

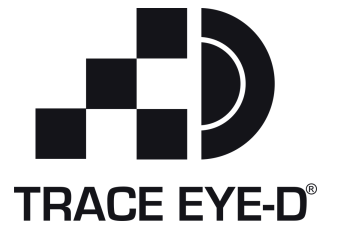


## *Open. Wipe. Look.*

***Reduce cross-contamination and exposure to M39, test surfaces and samples by wearing industry-standard personal protective equipment (PPE) such as nitrile gloves, eye protection, and N95 mask equivalent.***

- 1** **TO ACTIVATE**, fold bottom portion of pouch in half. Squeeze folded portion until you hear a "pop" sound. Work the fluid from upper chamber to lower chamber.  
**OPEN** the pouch and remove the wipe. Do not unfold towelette before or after use. Doing so will result in difficulty observing the results.
- 2** **WIPE** it across the surface to be tested. For best results, sample very small amounts of the substance on the margin of the wipe.
- 3** **LOOK** to see if the formula on the wipe changes color. Most results are instant, however, some may take up to 30 seconds for a color reaction to develop.
  - negative result // NO color change
  - positive result // blue/purplish-blue



# M39 // RESULTS

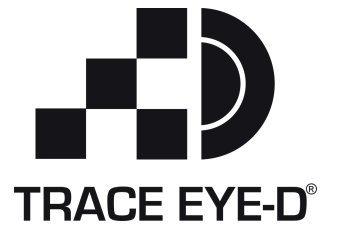


*Open. Wipe. Look.*


**NEGATIVE Result**  
*no color change*



**POSITIVE Result**  
*test turns blue/purplish-blue*

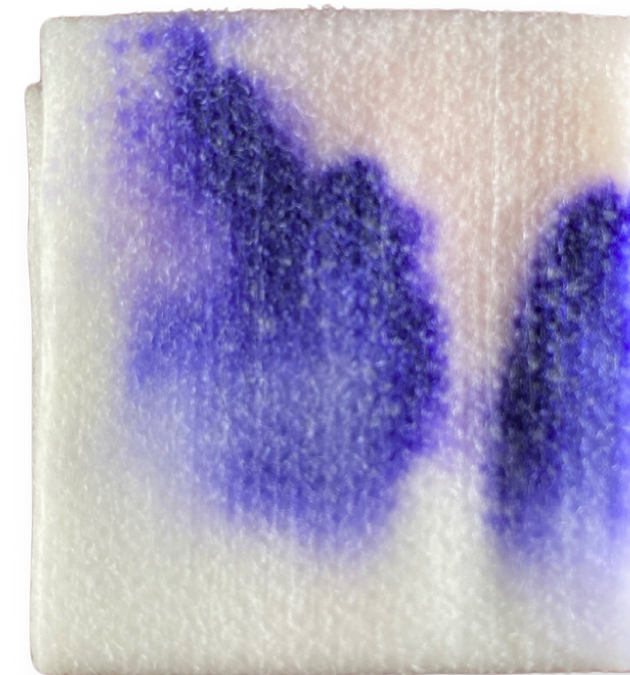

# M39 // POST TEST

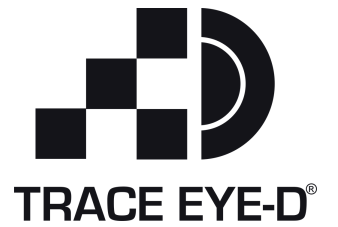

*Open. Wipe. Look.*

*All TRACE EYE-D products are safe for disposal in the common waste stream without neutralization or other special treatment, provided the wipe is not contaminated with drug residue*

- 1** **PHOTOGRAPH + STORE** the wipe with a date/time stamp, if required for evidence retention, as the color of the wipe may change over time.
- 2** **DISPOSE** of wipe in accordance with federal state and local environmental laws. No neutralization is required. Can be disposed of in the common waste stream.
- 3** **WASH HANDS + CHANGE** your gloves before conducting additional tests after a positive result is found.

Interested in additional training for your team?



[BOOK A LIVE TRAINING SESSION NOW](#)