


Methamphetamine / MDMA / Bath Salts / PCP Drug Detection Training

M39 Wipes
(TWO-PART POUCH)

M39 // OVERVIEW

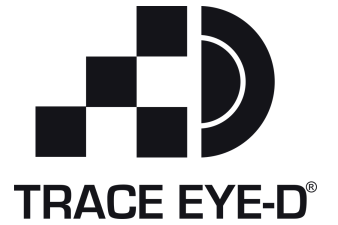

WHAT CAN M39 WIPES DETECT

- methamphetamines, MDMA/ecstasy, bath salts, and PCP


WHAT FORMS CAN M39 WIPES TEST

- powders, pills, liquids, residues, trace, and bulk


COLOR-CHANGING TECHNOLOGY

- When M39 comes in contact with methamphetamine, MDMA, bath salts or others, it turns blue/purplish-blue, to indicate meth, or its analogues, is present
- Positive result color will match the packaging color

Note: The Trace-Eye-D kit is intended to be used for **presumptive identification purposes only**, and all substances tested should be subjected to more definitive examination by scientists in a properly equipped crime laboratory.

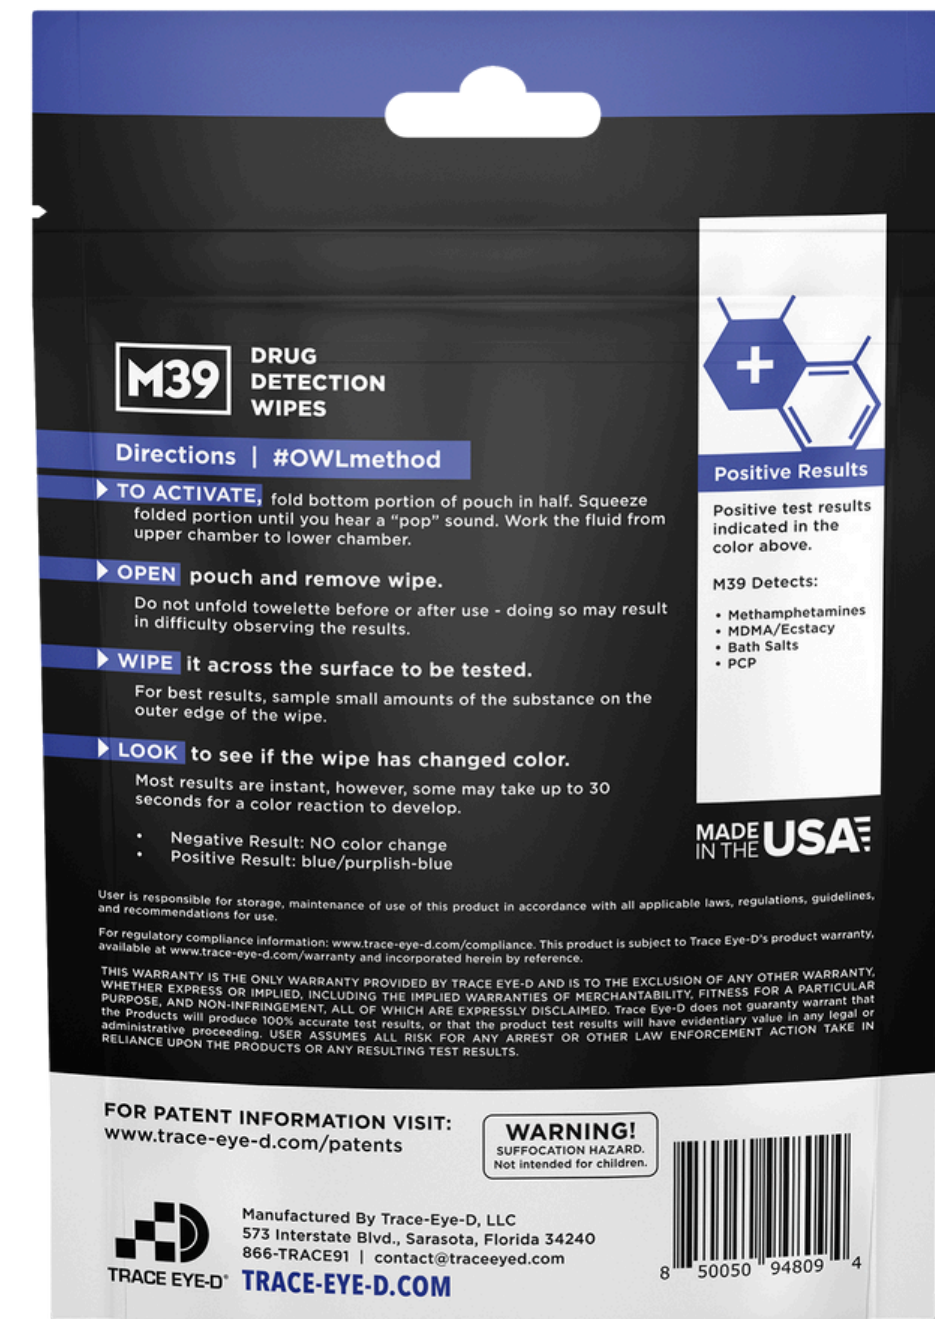

M39 // HOW TO USE

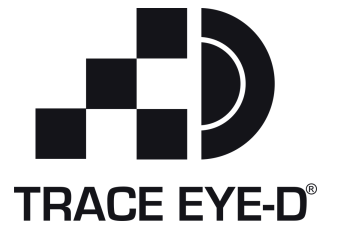


Open. Wipe. Look.

Reduce cross-contamination and exposure to M39, test surfaces and samples by wearing industry-standard personal protective equipment (PPE) such as nitrile gloves, eye protection, and N95 mask equivalent.

- 1** **TO ACTIVATE**, fold bottom portion of pouch in half. Squeeze folded portion until you hear a "pop" sound. Work the fluid from upper chamber to lower chamber.
OPEN the pouch and remove the wipe. Do not unfold towelette before or after use. Doing so will result in difficulty observing the results.
- 2** **WIPE** it across the surface to be tested. For best results, sample very small amounts of the substance on the margin of the wipe.
- 3** **LOOK** to see if the formula on the wipe changes color. Most results are instant, however, some may take up to 30 seconds for a color reaction to develop.
 - negative result // NO color change
 - positive result // blue/purplish-blue

M39 // RESULTS

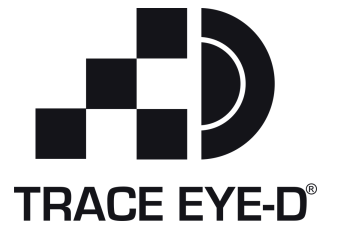


Open. Wipe. Look.

NEGATIVE Result
no color change



POSITIVE Result
test turns blue/purplish-blue

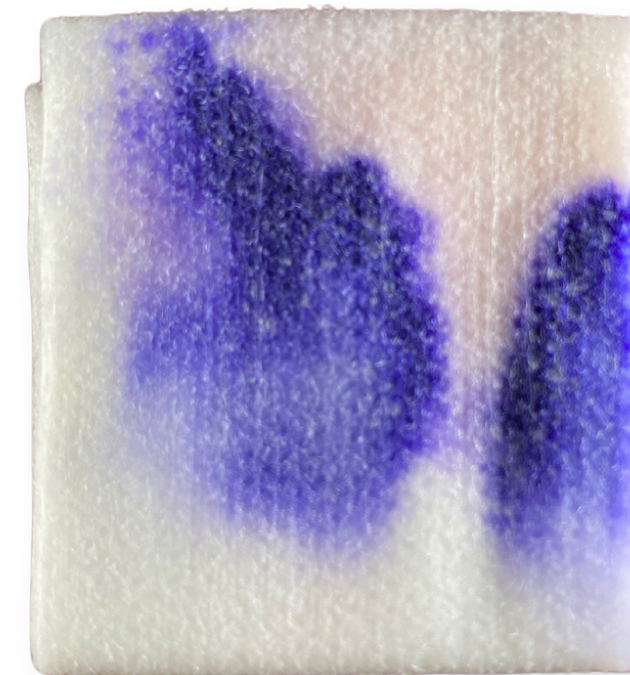

M39 // POST TEST



Open. Wipe. Look.

All TRACE EYE-D products are safe for disposal in the common waste stream without neutralization or other special treatment, provided the wipe is not contaminated with drug residue

- 1** **PHOTOGRAPH + STORE** the wipe with a date/time stamp, if required for evidence retention, as the color of the wipe may change over time.
- 2** **DISPOSE** of wipe in accordance with federal state and local environmental laws. No neutralization is required. Can be disposed of in the common waste stream.
- 3** **WASH HANDS + CHANGE** your gloves before conducting additional tests after a positive result is found.

Interested in additional training for your team?



BOOK A LIVE TRAINING SESSION NOW